



Figure similar

\*\*\*\*\* spare part \*\*\*\*\* SIMATIC S7, TS Adapter II for SIMATIC Teleservice RS-232 and integrated analog modem; connection to MPI/DP power supply MPI or external 24 V; parameter assignment via USB

last modified:

12/18/2020 