

## Installation & Operating Instructions

### 161LRJS (without test point) / 162LRJS (with test point)

### Loadbreak Elbow Connectors with Jacket Seal

**CONTENTS:** *Elbow Connector Housing, Compression Lug, Probe, Probe Wrench, Lubricant (Do Not Substitute)  
3-Sealing strips and Installation/Operating Instructions.*

The 161LRJS (without test point) and 162LRJS (with test point) are designed to terminate UD cable having jacketed concentric neutral wires and extruded insulation shielding. The elbow provides an operating interface for connecting to an Elastimold® 15kV class (8.3kV phase-to-ground and 14.4kV phase-to-phase) 200 ampere loadbreak bushing or accessory device with fault close rating of 10,000 amperes RMS symmetrical. Designed with a fold down extension on the cable entrance for sealing to the jacket of jacketed cable. When other types of UD cable are to be terminated, an appropriate Elastimold® cable shield or grounding device must be used.

#### DANGER

**All apparatus must be de-energized during installation or removal of part(s) except for test point caps and indicators that can be installed and operated energized.**

**Do not touch or move energized products in the work area.**

**These instructions do not attempt to provide for every possible contingency.**

**Failure to follow these instructions will result in damage to the product and serious or fatal injury.**

**This product should be installed only by competent personnel trained in good safety practices involving high voltage electrical equipment. These instructions are not intended as a substitute for adequate training or experience in such safety practices.**

**All apparatus must be installed and operated in**

FOR MORE INFORMATION ON PARTS, INSTALLATION RATINGS AND COMPATIBILITY, CALL THE NEAREST ELASTIMOLD® OFFICE.

#### **Limited Warranty:**


1. T&B warrants that its products will be free from defects in materials or workmanship for a period of two (2) years, except for tools which are warranted separately (see warranty accompanying those products). Fisher Pierce® products and Elastimold® Reclosers are warranted for three years; and Joslyn™ VBT and VBU capacitor switches are warranted for four years or 40,000 operations whichever occurs first. Upon prompt notification of a warranted defect, T&B will, at its option, repair or replace the defective product.
2. In no event shall T&B be liable for any consequential, indirect or special damages, nor will T&B be liable for transportation, labor, or other charges arising out of the removal or reinstallation of its products. Liability for breach of warranty is limited to the cost of repair or replacement of the warranted product only.
3. Misuse, misapplication or modification of T&B products immediately voids all warranties.

THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES AND REMEDIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHICH ARE SPECIFICALLY DISCLAIMED.

#### **IMPORTANT**


1. Check contents of package to ensure they are complete and undamaged.
2. Check all components to ensure proper fit with cable and/or mating products.
3. Check threads by threading probe into compression lug. If resistance is encountered prior to full assembly, check for damage and replace damaged component.
4. Read entire installation instructions before starting.
5. Have all required tools at hand and maintain cleanliness throughout the procedure.

**Caution:** If test point cap is not installed, lubricate cap and test point and install cap.

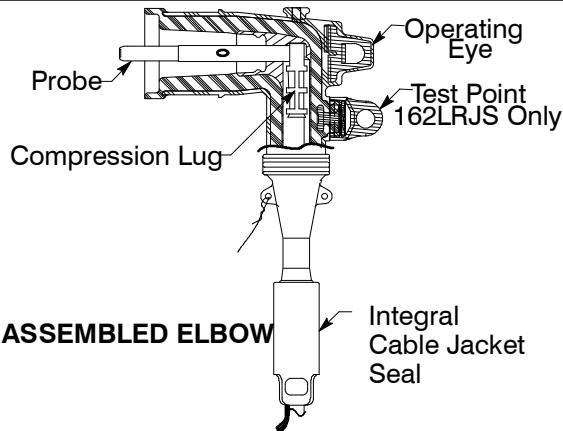


## STEP 1 CABLE TRAINING

- Train cable to ensure slack for ease of operation.
- Use one of the two following methods to provide an extra length of concentric neutral wires or grounding braid wire to facilitate the connection of the neutral to the tank ground and the operation of the hotstick:
  - Mark the centerline of the bushing with tape and pull extra cable to 24-26" beyond the centerline. Remove the outer jacket 7 3/4" to 8" back from centerline.
  - Proceed to step "D" and connect the neutral wires to the tank ground with a jumper or grounding braid.
- Unwrap the neutral wire back past the bushing centerline.
- Cut excess cable squarely at the centerline of the bushing.

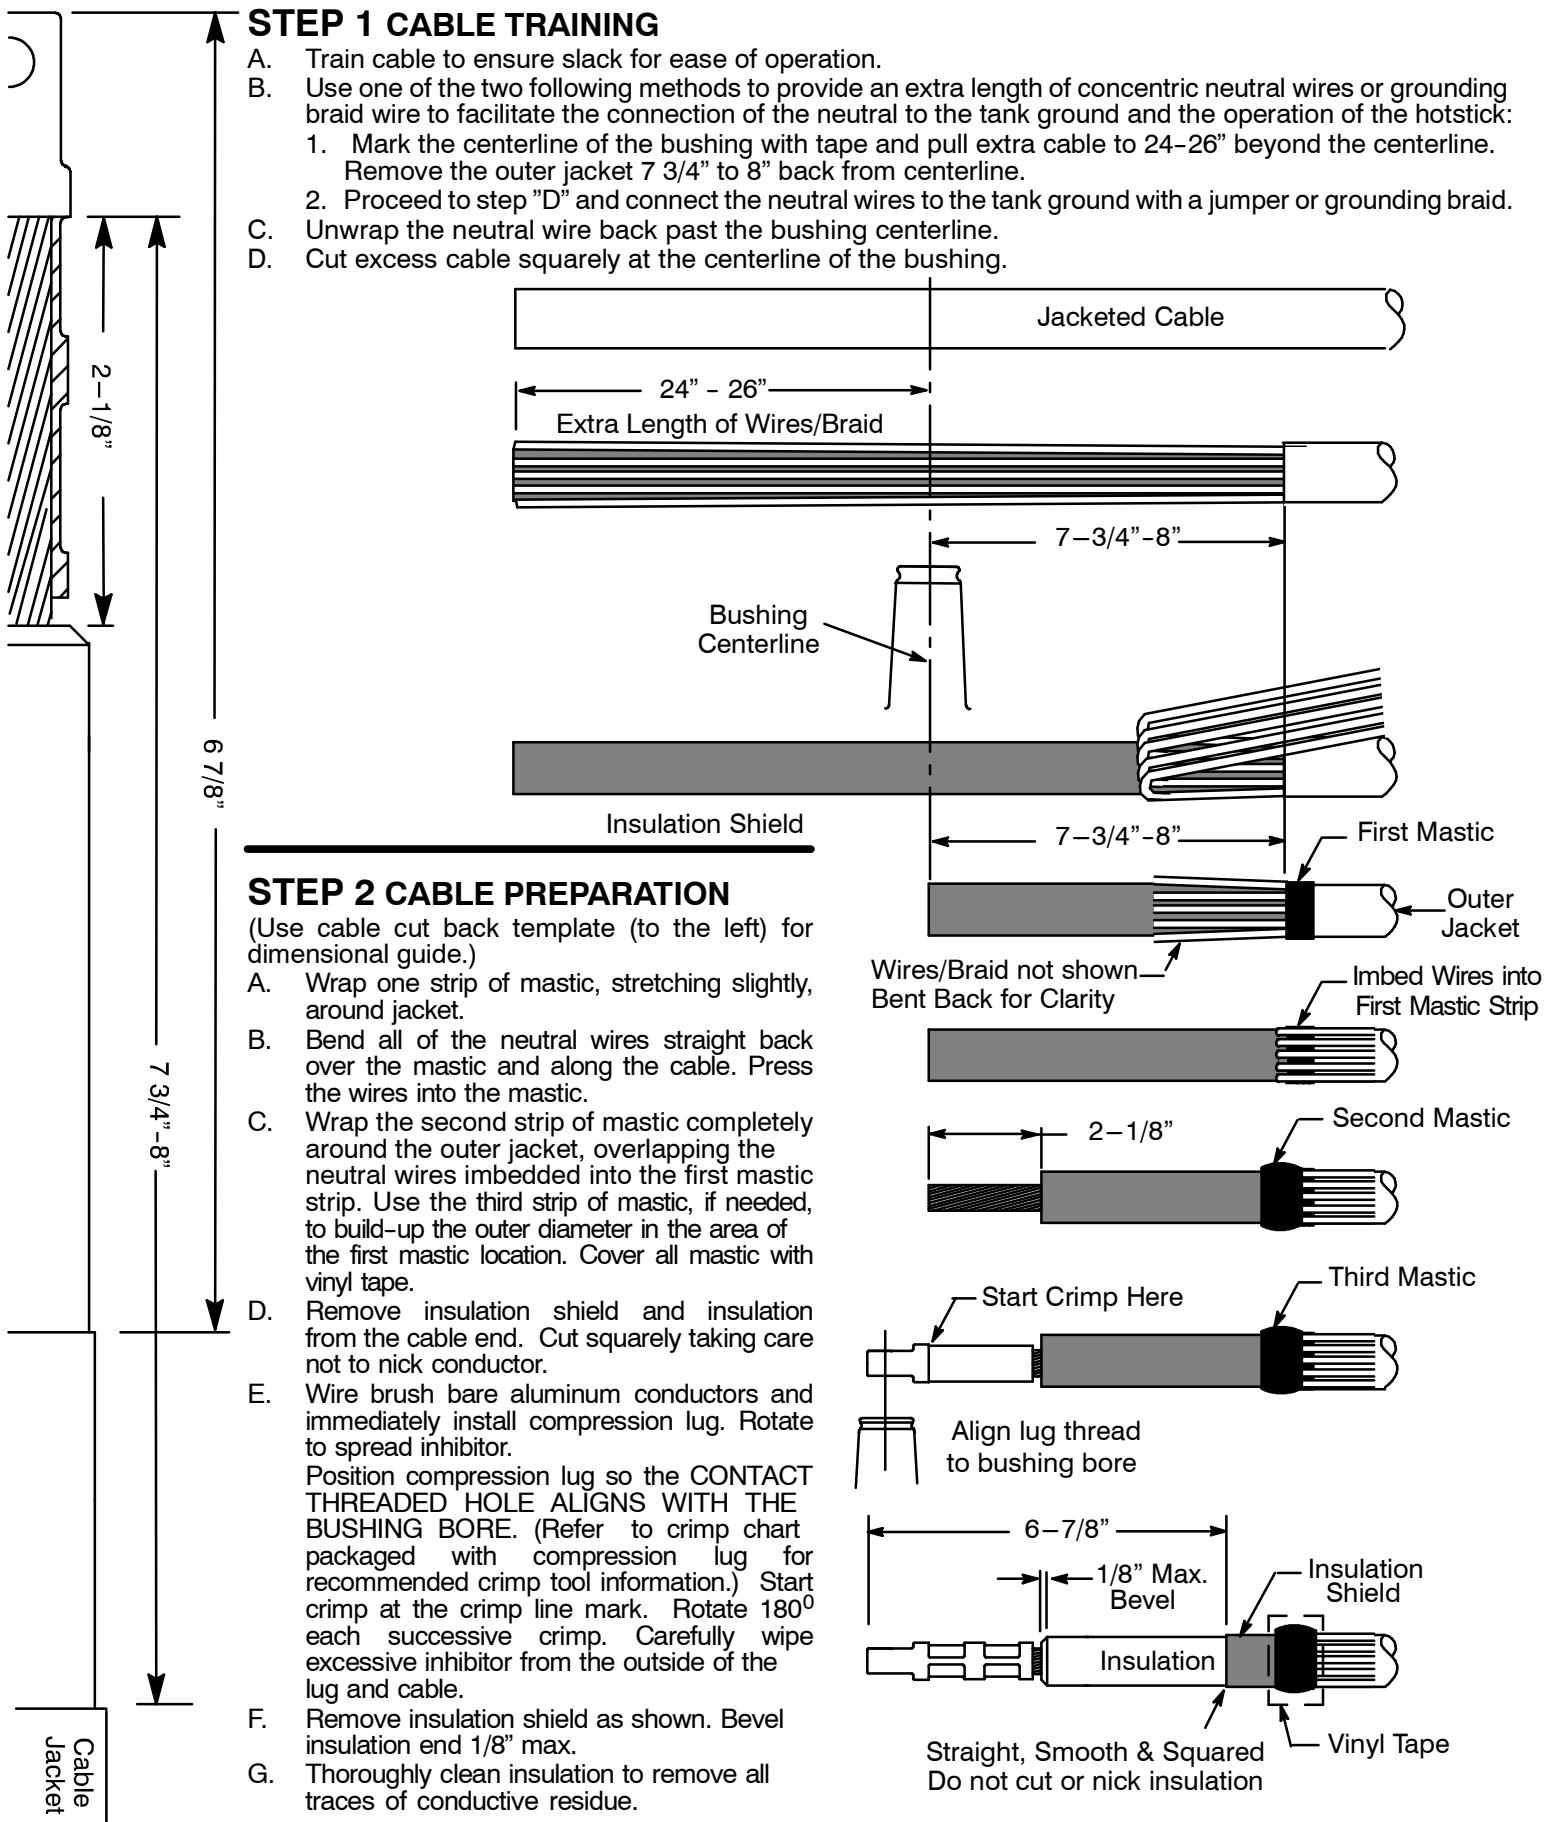


### STEP 3 ELBOW ASSEMBLY

- A. Lubricate the cable insulation and inside the elbow housing with the lubricant supplied. DO NOT SUBSTITUTE. Other lubricants may be harmful to this product or its mating part(s). Keep insulation clean of dirt and grime.
- B. Slide the elbow connector onto the cable with a back and forth twisting motion. Wipe off all excess lubricant.
- C. Align elbow with compression lug's threaded hole.
- D. Thread probe into lug by hand, taking care not to cross-thread. The probe **must** turn freely for approximately four turns before becoming snug. Tighten with wrench until wrench bends.

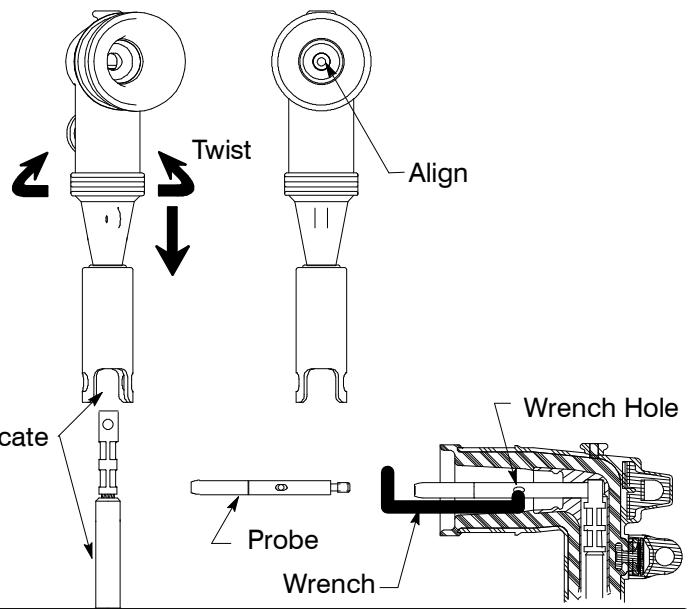



### STEP 4 CONCENTRIC NEUTRAL CONNECTION

- A. Pull the hood over the concentric neutral seal area on the cable by pulling the tabs and/or rolling the seal down.
- B. Insert one end of a separate copper wire (No. 14 AWG / 2.5mm) or equivalent through the grounding eye on the elbow. Twist tightly taking care not to damage the eye.
- C. Twist all neutral wires and connect to ground using appropriate connector. Provide adequate slack in wires for elbow operation.

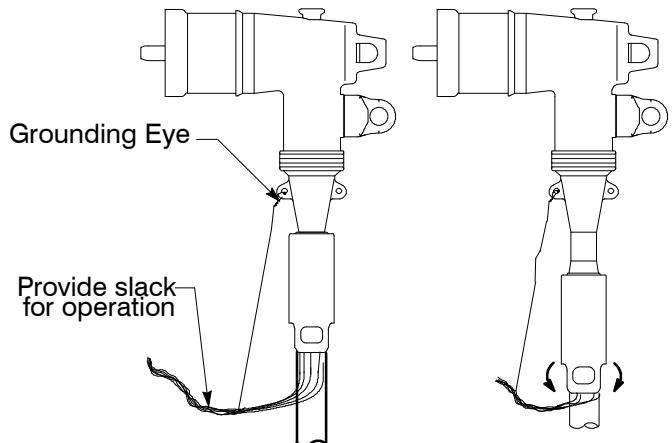

### STEP 5 CONNECT ELBOW AND BUSHING PLUG

- A. Lubricate the receptacle portion of the elbow connector and the mating bushing with the lubricant supplied. LUBRICATE ONLY IF THE TRANSFORMER AND ELBOW ARE KNOWN TO BE DE-ENERGIZED.
- B. Operate per following instructions. DO NOT OPERATE BY HAND.

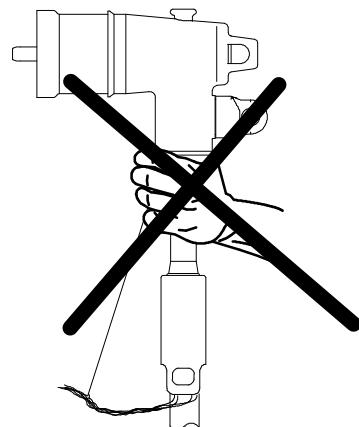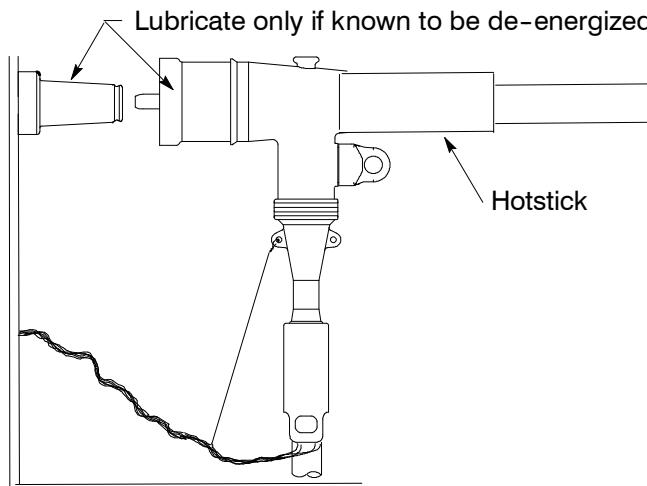

# OPERATING INSTRUCTIONS

## Before Loadmake or Loadbreak Operation:

Ensure connector is clean and free of any contaminants. Ensure work area is clear of obstructions to allow installer to establish firm footing and ensure a secure grasp on the hotstick tool. Maintain positive control over the movement of the loadbreak connector before, during and directly after the operating sequence. Because of the control, speed and force required to engage or disengage the elbow, certain operating positions are more advantageous than others. If there is some question as to proper operating position, it is recommended that the connectors be operated de-energized. Do not connect two different phases of a multiple-phase system. Before closing a single-phase loop, make certain both ends of the loop are the same phase.

## LOADMAKE OPERATION

**Loadbreak connectors must be operated with a fully insulated "hotstick" type live-line tool. Consult the Utility's safe work practices for the required live-line tool length.**

1. To prepare bushing for elbow connector, remove insulated cap by attaching hotstick tool to the insulated cap pulling eye, and following the instructions for this accessory, remove from bushing.
2. Securely fasten the hotstick to the loadbreak connector pulling eye.
3. Confirm positive control of the elbow connector. Withdraw the elbow from the accessory device on the apparatus parking stand with a fast, straight, firm motion being careful not to place the elbow connector near a ground plane. Check appropriate accessory device operating instructions to be sure that the device is rated for energized operation.
4. Insert the probe tip approximately 2" (50mm) into the bushing (at this point the contacts are approximately 4" apart). **DO NOT HOLD IN THIS POSITION BUT IMMEDIATELY PUSH THE ELBOW HOME WITH A FAST, FIRM, STRAIGHT MOTION.**

Use sufficient force to engage the internal lock on the elbow connector and bushing interface.

## Fault Close

1. **DO NOT CONDUCT LOADMAKE OPERATIONS ON KNOWN FAULTS.**
2. If a fault is experienced, both the elbow connector and the bushing must be replaced.

## LOADBREAK OPERATION

1. Place desired accessory device on apparatus parking stand. Refer to appropriate operating instructions for accessory device to be used. Confirm device is rated for energized operation.
2. Firmly tighten the hotstick to the loadbreak connector pulling eye.
3. Without exerting any pulling force, slightly rotate (clockwise) the connector in order to break surface friction prior to disconnection.
4. Withdraw the connector from the bushing with a fast, firm, straight motion, being careful not to place the connector near a ground plane.
5. Place connector on appropriate accessory device, following the operating instructions for that accessory.

## VOLTAGE TEST

ELASTIMOLD® connectors equipped with an integral capacitance test point can be used to determine whether or not the circuit is energized.

When using the test point, complete the following steps:

1. Remove test point cap with the hotstick. When removing cap, PEEL OFF AT AN ANGLE rather than pulling directly in line with the test point assembly.
2. **WARNING: THE VOLTAGE TEST POINT IS A CAPACITANCE DEVICE, IT IS NOT DIRECTLY CONNECTED TO THE CONDUCTOR.** Do not use conventional voltage measuring equipment. Follow the manufacturer's directions for the meter that is used. Test with a suitable sensing device, made for use with separable connectors manufactured with capacitive test points, to determine if cable is energized. Contamination, moisture, dirt, etc. around the test point or use of the wrong measuring equipment can provide a false "no voltage" indication on an energized elbow. To prevent serious or fatal injury treat the elbow as energized until the "no voltage" test point indication is confirmed by other means.
3. After voltage detection has been made, clean and lubricate the inside surface of the cap with silicone lubricant supplied and replace it on the test point.

---

### THOMAS & BETTS CORP. PROPRIETARY AND CONFIDENTIAL

BY ACCEPTANCE OF THIS DOCUMENT YOU AGREE THAT ALL RIGHTS TO THE DRAWINGS AND INFORMATION CONTAINED IN IT, AS WELL AS THE SUBJECT MATTER AND ALL PROPRIETARY AND NOVEL FEATURES DISCLOSED, ARE OWNED BY THOMAS & BETTS CORP AND THAT DEVICES EMBODIMENT SUCH FEATURES OR INFORMATION DERIVED FROM THESE DRAWINGS WILL NOT BE MANUFACTURED BY OR FOR YOU OR DISCLOSED TO OTHERS WITHOUT THE PRIOR EXPRESS WRITTEN CONSENT OF THOMAS & BETTS CORP. THESE DRAWINGS ARE NOT TO BE COPIED OR REPRODUCED OR DISCLOSED TO OTHERS WITHOUT THE PRIOR EXPRESS WRITTEN CONSENT OF THOMAS & BETTS CORP. ALL DRAWINGS AND INFORMATION ARE TO BE RETURNED TO UPON DEMAND OR UPON COMPLETION OF PURPOSE FOR WHICH LENT. COPYRIGHT THOMAS & BETTS CORP. ALL RIGHTS RESERVED. ALL OTHER TRADEMARKS ARE THE PROPERTY OF THEIR RESPECTIVE OWNERS.